 





HEXPACT

SECURE LOCK

Keep Devices Closed. Reduce Screen Damage in Student Backpacks.

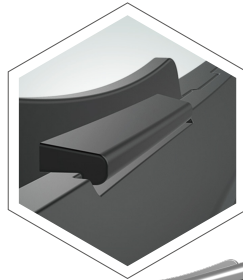

 
Front Secure Lock
closed in backpacks
— reduces screen break risk

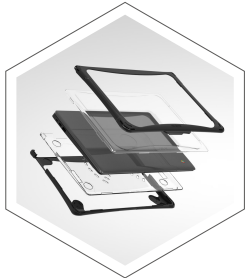

4-Layer Protection
Built for everyday student drops
and rough handling



 Two-Piece Design
Easy to install, remove,
and maintain across large fleets

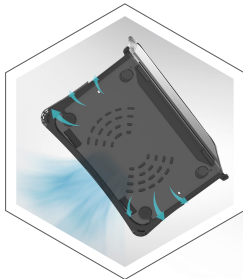

Max Ventilation
Prevents overheating during
long classroom use



Custom Logo
Helps schools identify
and manage devices easily



Barcode Friendly
Scan assets without
removing the case



Military Drop Protection
(4 ft tested)



Eco Guard
(CA65 Compliant)



Custom Colors
Available



Contact our sales team today
917-209-0841 | info@ibenzer.com

IBENZER
Live Smart, Protect Smarter

www.ibenzerb2b.com




COMPATIBLE MODELS - ALL PART NUMBERS

Brand	Model	Size	Part Number
Acer	Chromebook 11" C722	11"	LC-HPE-AC11C722-BK
Acer	Chromebook 11" C737	11"	LC-HPE-AC11C737-BK
HP	Chromebook 11" G8	11"	LC-HPE-HP11G10-BK
HP	Chromebook 11" G9	11"	LC-HPE-HP11G10-BK
HP	Chromebook 11" G10	11"	LC-HPE-HP11G10-BK
HP	Chromebook 11" G1i	11"	LC-HPE-HP11G1i-BK
HP	Chromebook 14" G6	14"	LC-HPE-HP14G6-BK
HP	Chromebook 14" G7	14"	LC-HPE-HP14G6-BK
Dell	Chromebook 11" 3120 Clamshell	11"	LC-HPE-DL3100-180BK
Dell	Chromebook 11" 3110 Clamshell	11"	LC-HPE-DL3100-180BK
Dell	Chromebook 11" 3100 Clamshell	11"	LC-HPE-DL3100-180BK
Lenovo	Chromebook 11" 100e Gen 3	11"	LC-HPE-LNV100E3-BK
Lenovo	Chromebook 11" 100w Gen 3	11"	LC-HPE-LNV100E3-BK

Compatible with the most commonly used Chromebook models in K12 environments


Easy open design — no force needed for daily use

 Helps reduce hinge damage from improper handling

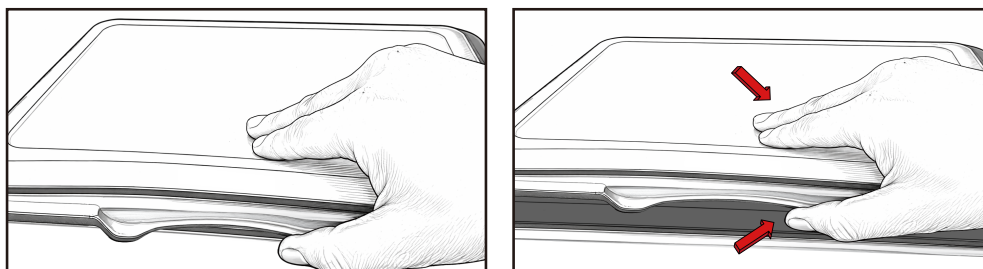


Quick installation — no tools required

 
Installation

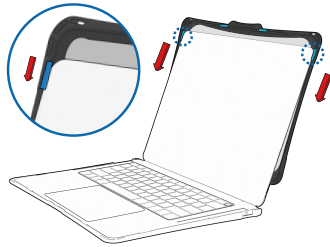

 1 Slide the top cover down and align the screen under the both upper side clips until the laptop reaches the top edge of the top cover.

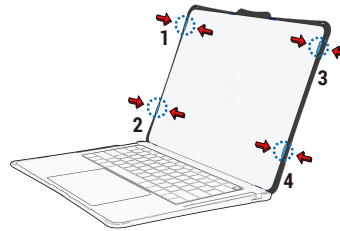

 
2 Press the clips (4) on both sides to ensure each clip is securely attached.

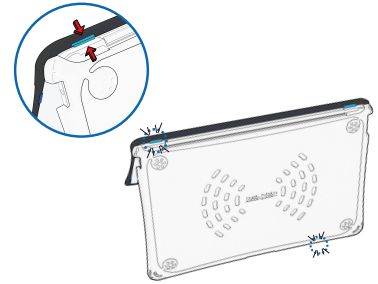

3 Flip your laptop to the back and press the two clips onto the lower edge.



 4 Slide the laptop forward until the device reaches the front edges of the bottom cover.

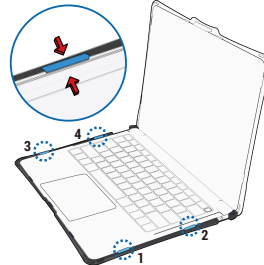


5 Press the both side clips (4) to snap onto the device.




6 Press the rear corner clips to snap into place.

Quick removal — no tools required

 
Removal

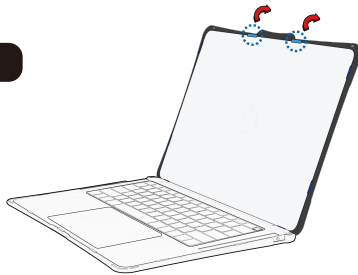

 
1 Push up the two top edge micro clips off your laptop.

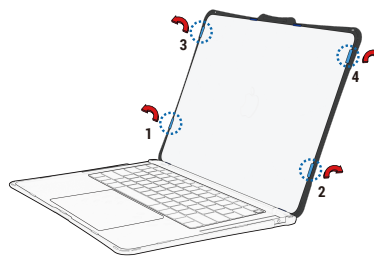

 
2 Push the 4 side clips outward to detach the lower part of the top cover from the device.

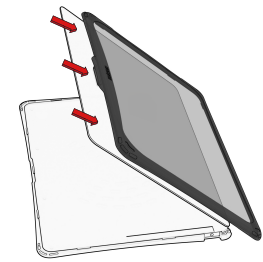

 
3 Slide the top cover down to remove it.

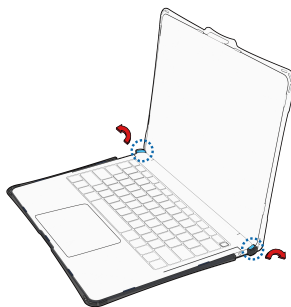

4 Press the rear sides clips outward.

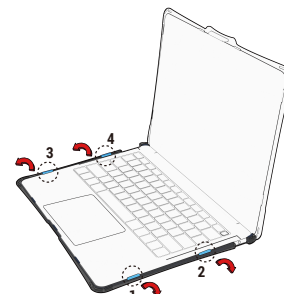 

 5 Press the both sides clips (4) off the device.

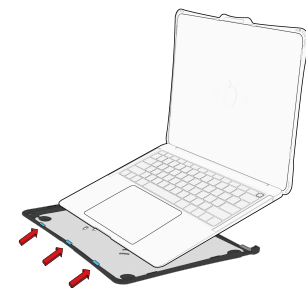

6 Slide the device backward to remove it.