



 
HEXPACT

Hexpact Air


Lightweight Protection. Built for Everyday Classroom Use.



Lightweight Design
Easy for students to carry

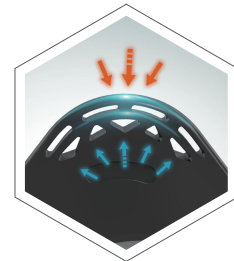

 Corner Protection
Helps absorb daily classroom drops

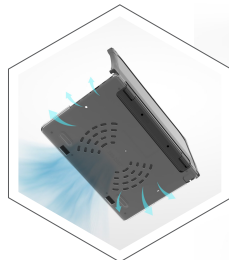

Max Ventilation
Keeps devices cool during use



Two-Piece Design
Easy installation & maintenance



Barcode Friendly
No need to remove case for scanning



Military Drop Protection
(4 ft tested)



Eco Guard
(CA65 Compliant)



Custom Colors Available



Contact our sales team today
917-209-0841 | info@ibenzer.com

IBENZER
Live Smart, Protect Smarter

www.ibenzer.com




COMPATIBLE MODELS - ALL PART NUMBERS

Brand	Model	Size	Part Number
Asus	Chromebook CR1104 / BR1104	11"	LC-HPA-AS1104
Asus	Chromebook CR1204C / CR1204F	12"	LC-HPA-AS1104
Acer	Chromebook CBOA311-1H-C90F	11"	LC-HPA-AC-CBOA311
HP	Chromebook G1i / G10 / G11	14"	LC-HPA-HP14G10
HP	EliteBook 8 Flip G1i	13"	LC-HPA-HP13EB8-G1i-F-BK
HP	ProBook 4 G1a & G1i	14"	LC-HPA-HP14PB4-G1i-BK
HP	ProBook 440 445 G11	14"	LC-HPA-HP14PB4-G1i-BK
HP	EliteBook 640 645 G11	14"	LC-HPA-HP14PB4-G1i-BK
HP	EliteBook 6 G1i G1a	14"	LC-HPA-HP14PB4-G1i-BK
Dell	Chromebook CC14260	14"	LC-HPA-DL14-BK
Dell	Pro Education PE14260	14"	LC-HPA-DL-PRO14-BK

Compatible with the most commonly used Chromebook models in K12 environments

Easy open design — no force needed for daily use

 Helps reduce hinge damage from improper handling

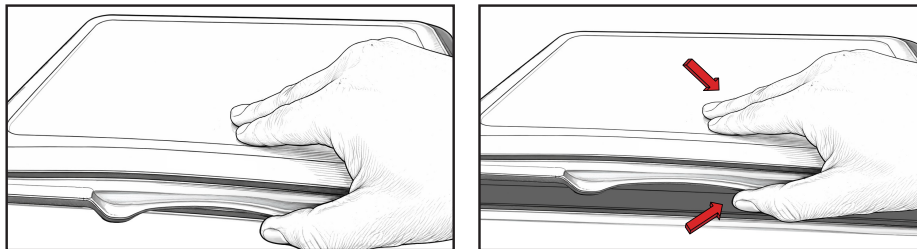

Contact our sales team today
917-209-0841 | info@ibenzer.com

IBENZER
Live Smart, Protect Smarter

www.ibenzer.com

 


HEXPACT


Hexpact Air

Quick installation — no tools required


Installation

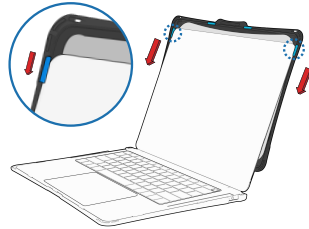

 - 1 Slide the top cover down and align the screen under the both upper side clips until the laptop reaches the top edge of the top cover.

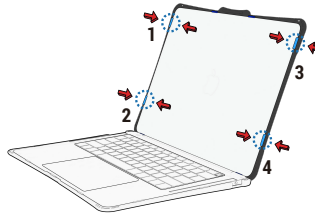

 
- 2 Press the clips (4) on both sides to ensure each clip is securely attached.

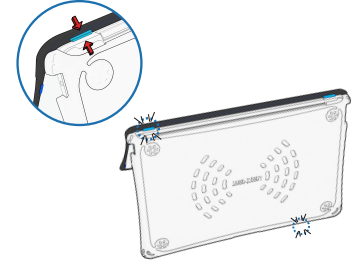


- 3 Flip your laptop to the back and press the two clips onto the lower edge.



 - 4 Slide the laptop forward until the device reaches the front edges of the bottom cover.

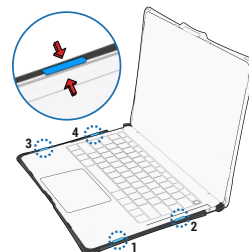

 
- 5 Press the both side clips (4) to snap onto the device.

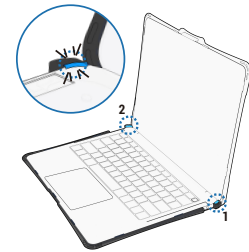


- 6 Press the rear corner clips to snap into place.

Quick removal — no tools required

 
Removal

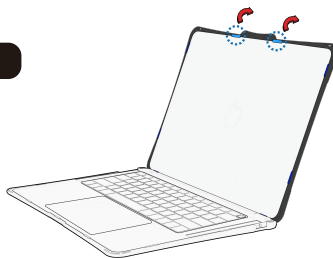

 
- 1 Push up the two top edge micro clips off your laptop.

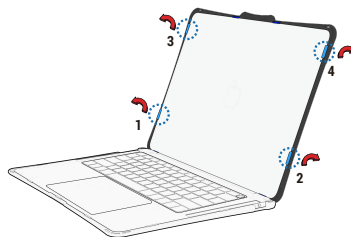

 
- 2 Push the 4 side clips outward to detach the lower part of the top cover from the device.

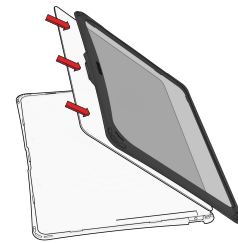

 
- 3 Slide the top cover down to remove it.

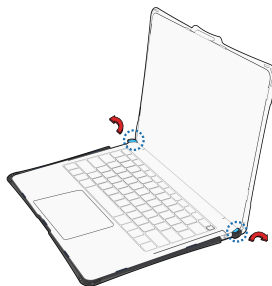

- 4 Press the rear sides clips outward.

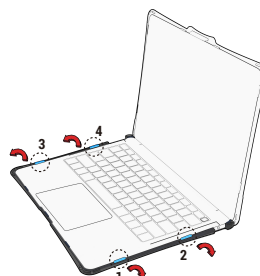 

 - 5 Press the both sides clips (4) off the device.

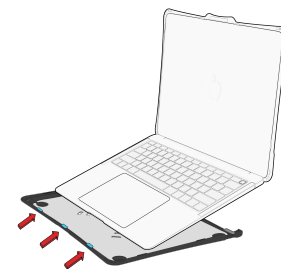

- 6 Slide the device backward to remove it.