 





HEXPACT

360°- Axis Armor


Built for Daily Classroom Drops. Designed for Better Hinge Protection.

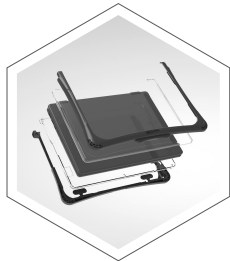

 
4-Layer Protection
Designed for
daily classroom drops

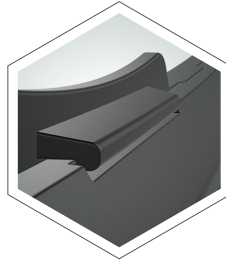

 
Front Secure Lock
Helps prevent screen
damage inside bags

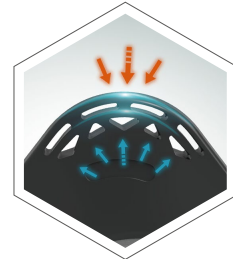

 Dual Corner Airbag
Absorbs corner impact
from drops

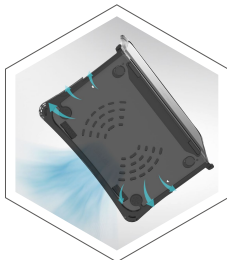

 Max Ventilation
Keeps devices cool during use

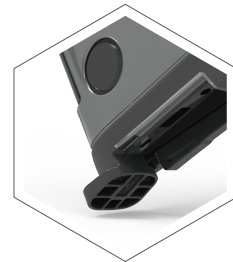

Axis Armor
Reinforced hinge-side
protection



Barcode Friendly
No need to remove case
for scanning



Military Drop Protection
(4 ft tested)



Eco Guard
(CA65 Compliant)



Custom Colors
Available



Contact our sales team today
917-209-0841 | info@ibenzer.com

IBENZER
Live Smart, Protect Smarter

www.ibenzer.com




COMPATIBLE MODELS - ALL PART NUMBERS

Brand	Model	Size	Part Number
HP	Pro x360 Fortis G9 / G10 / G11	11"	LC-HPE3-HP11PB-G10-BK
HP	Chromebook 11" G1m	11"	LC-HPE3-HP11-G1m-BK
HP	Chromebook 11" X360 G5/G4/G3	11"	LC-HPE-HP11XG5-BK
Lenovo	Chromebook 300e/w Gen 4	11"	LC-HPE3-LNV300E4-BK
Lenovo	Chromebook 300e/w Gen 5	11"	LC-HPE3-LNV300E5-BK
Lenovo	Chromebook 100e/w Gen 5	11"	LC-HPE3-LNV100E5-BK
Lenovo	Chromebook 500e/w Gen 4	12"	LC-HPE3-LNV500E4-BK
Lenovo	Chromebook 500e/w Gen 5	12"	LC-HPE3-LNV500E5-BK
Dell	Chromebook 11" P29T CC11260 Clamshell	11"	LC-HPE3-DL11260-180BK
Dell	Chromebook 11" P29T CC11260 2in1	11"	LC-HPE3-DL11260-360BK
Dell	Latitude 3120 / 3140 Clamshell and 2-in-1	11"	LC-HPE3-DL3140-BK
Acer	Chromebook C725	11"	LC-HPE3-AC11C725-BK
Acer	Chromebook R725	11"	LC-HPE3-AC11R725-BK
Acer	Chromebook 511 R757	11"	LC-HPE3-AC11R757-BK

Compatible with the most commonly used Chromebook models in K12 environments

Easy open design — no force needed for daily use

 Helps reduce hinge damage from improper handling

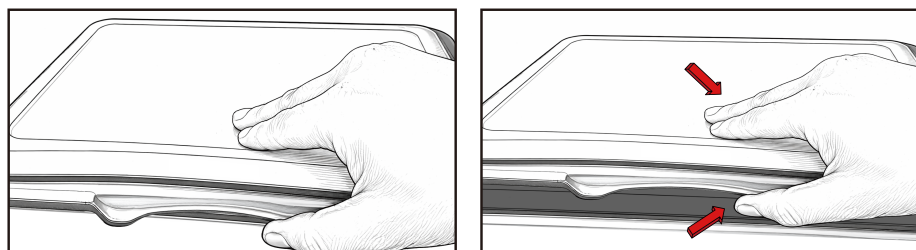

Contact our sales team today
917-209-0841 | info@ibenzer.com

IBENZER
Live Smart, Protect Smarter

www.ibenzer.com

 


HEXPACT


360°-Axis Armor

Quick installation — no tools required


Installation

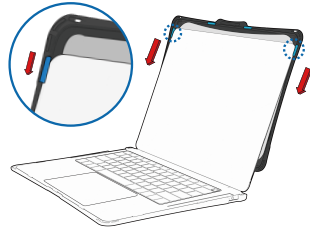

 - 1 Slide the top cover down and align the screen under the both upper side clips until the laptop reaches the top edge of the top cover.

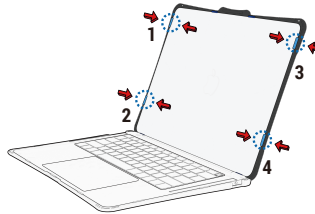

 
- 2 Press the clips (4) on both sides to ensure each clip is securely attached.

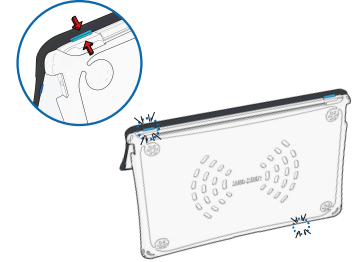


- 3 Flip your laptop to the back and press the two clips onto the lower edge.



 - 4 Slide the laptop forward until the device reaches the front edges of the bottom cover.

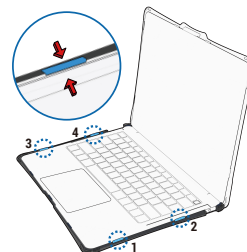

 
- 5 Press the both side clips (4) to snap onto the device.

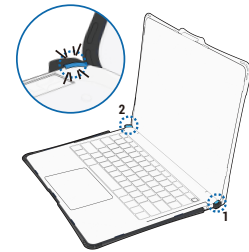


- 6 Press the rear corner clips to snap into place.

Quick removal — no tools required

 
Removal

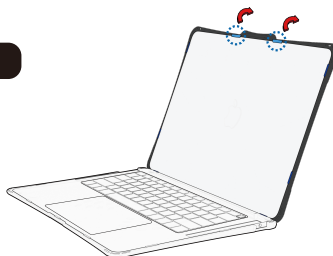

 
- 1 Push up the two top edge micro clips off your laptop.

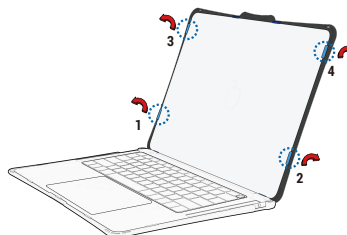

 - 2 Push the 4 side clips outward to detach the lower part of the top cover from the device.

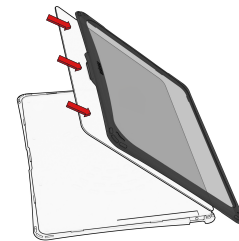

 
- 3 Slide the top cover down to remove it.

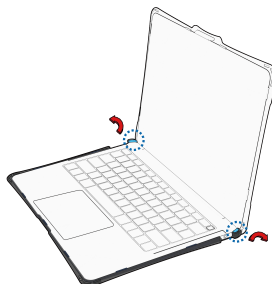

- 4 Press the rear sides clips outward.



 - 5 Press the both sides clips (4) off the device.

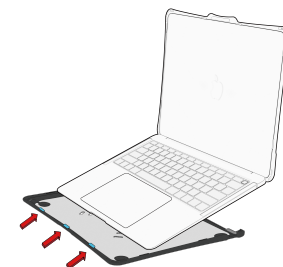

- 6 Slide the device backward to remove it.